


Anritsu envision : ensure

ShockLine™ Economy Vector Network Analyzers

MS46322A

1 MHz to 43.5 GHz

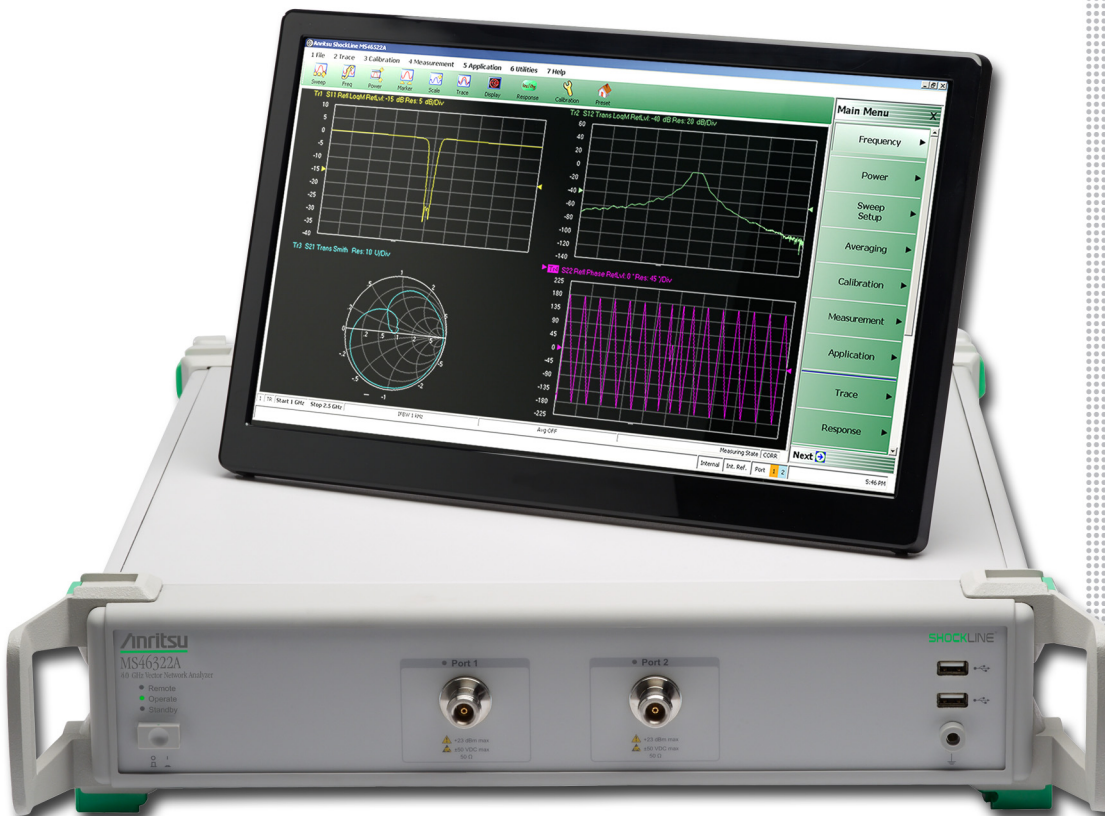

Introduction

The MS46322A is part of the ShockLine™ family of Vector Network Analyzers from Anritsu. It is a low-cost series of 2U high, 2-port Economy Vector Network Analyzers. It is available in six frequency ranges: 1 MHz to 4/8/14/20/30/43.5 GHz, and is capable of s-parameter and time domain measurements.

The MS46322A is based on patented ShockLine™ VNA-on-chip technology, which simplifies the internal VNA architecture at high frequencies, reduces instrument cost, and enhances accuracy and measurement repeatability. The combination of low cost and good performance make ShockLine™ VNAs ideal candidates for testing RF and Microwave passive devices to 43.5 GHz.

The MS46322A series supports SCPI command programming and has software driver support for the most common programming environments. The MS46322A use industry standard LAN communications for robust remote control in test applications. ShockLine™ VNAs provide a powerful graphical user interface for manual testing of devices. The full-featured user interface is enabled by attaching a (user-supplied) touchscreen monitor, keyboard, and mouse.

This document provides detailed specifications for the MS46322A series Vector Network Analyzers (VNAs) and related options.

Instrument Models and Operating Frequencies

Base Model

- MS46322A, 2-Port ShockLine VNA

Requires one Frequency Option

- MS46322A-004, 1 MHz to 4 GHz, 2-port
- MS46322A-010, 1 MHz to 8 GHz, 2-port
- MS46322A-014, 1 MHz to 14 GHz, 2-port
- MS46322A-020, 1 MHz to 20 GHz, 2-Port
- MS46322A-030, 1 MHz to 30 GHz, 2-Port
- MS46322A-040, 1 MHz to 43.5 GHz, 2-Port

Principal Options

- MS46322A-002, Time Domain



MS46322A-040 2-Port ShockLine Economy VNA

Table of Contents

Definitions 3

System Dynamic Range 4

Receiver Compression Levels 4

High Level Noise 4

Output Power Settings 4

Measurement Stability 4

Frequency Resolution, Accuracy, and Stability 4

Uncorrected (Raw) Port Characteristics 4

VNA System Performance for MS46322A-004 and MS46322A-010 (Manual Cal Kits) 5

VNA System Performance for MS46322A-014 and MS46322A-020 (Manual Cal Kits) 6

VNA System Performance for MS46322A-030 and MS46322A-040 (Manual Cal Kits) 7

VNA System Performance for MS46322A-004 and MS46322A-010 (SmartCal™) 8

VNA System Performance for MS46322A-040 (AutoCal) 9

Measurement Throughput Summary 10

Standard Capabilities 10

Calibration and Correction Capabilities 12

Optional Capabilities 12

Remote Operability 12

Front Panel Connections 13

Rear Panel Connections 13

CPU, Memory, and Security Features 14

Mechanical 14

Environmental 14

Electromagnetic Compatibility 14

Safety 14

Warranty 14

Ordering Information 15

Definitions

	All specifications and characteristics apply under the following conditions, unless otherwise stated:
Warm-Up Time	After 30 minutes of warm-up time, where the instrument is left in the ON state.
Temperature Range	Over the 25 °C ± 5 °C temperature range.
Error-Corrected Specifications	Specifications are valid over 23 °C ± 3 °C, with < 1 °C variation from calibration temperature. Error-corrected specifications are warranted and include guard-bands, unless otherwise stated.
Frequency Bands in Tables	When a frequency is listed in two rows of the same table, the specification for the common frequency is taken from the lower frequency band.
User Cables	Specifications do not include effects of any user cables attached to the instrument.
Discrete Spurious Responses	Specifications may exclude discrete spurious responses.
Internal Reference Signal	All specifications apply with internal 10 MHz Crystal Oscillator Reference Signal.
Interpolation Mode	All specifications are with Interpolation Mode Off.
Standard	Refers to instruments without Options.
Typical Performance	Typical performance indicates the measured performance of an average unit. It does not include guard-bands and is not covered by the product warranty. Typical specifications are shown in parenthesis, such as (-102 dB), or noted as Typical. The MS46322A is operational to 43.5 GHz. All specifications above 40 GHz are typical.
Characteristic Performance	Characteristic performance indicates a performance designed-in and verified during the design phase. It does include guard-bands and is not covered by the product warranty.
Recommended Calibration Cycle	12 months (Residual specifications also require calibration kit calibration cycle adherence.)
Specifications Subject to Change	All specifications subject to change without notice. For the most current data sheet, please visit the Anritsu web site: www.anritsu.com

System Dynamic Range

System dynamic range is calculated as the difference between High source power and the noise floor (RMS) at the specified reference plane at 10 Hz IF Bandwidth.

Frequency Range	Standard (dB)	Typical (dB) ^a
1 MHz ^b to 20 MHz	85	105
> 20 MHz to 8 GHz	100	115
> 8 GHz ^c to 43.5 GHz	100	110

a. Typical performance obtained by using optional isolation calibration.

b. Decrease specification by 20 dB below 10 MHz.

c. Decrease specification by 5 dB between 8 GHz and 14 GHz.

Receiver Compression Levels

Performance is typical.

Frequency Range	Standard (dBm)
1 MHz to 43.5 GHz	+5 dBm

High Level Noise

Measured at 100 Hz IF bandwidth and at High power level, RMS. Performance is characteristic.

Frequency	Magnitude (dB)	Phase (deg)
1 MHz to < 20 MHz	0.03 (0.005, typical)	< 0.2 (< 0.035 typical)
20 MHz to 43.5 GHz	0.006 (0.001, typical)	< 0.1 (< 0.05 typical) ^a

a. Above 20 GHz, High Level Noise (phase only) is increased by a factor of 1.5.

Output Power Settings

Power Setting	Standard (dBm)
High (default)	-3 dBm, typical
Low	-20 dBm, typical

Measurement Stability

Ratio measurement, with ports shorted. Typical.

Frequency	Magnitude (dB/°C)	Phase (deg/°C)
10 MHz to 43.5 GHz	0.02	0.3

Frequency Resolution, Accuracy, and Stability

Resolution	Accuracy	Stability	Aging
1 Hz	± 1.0 ppm (at time of calibration)	± 1.0 ppm from -10 °C to +55 °C, typical	± 1.0 ppm/yr, typical

Uncorrected (Raw) Port Characteristics

User and System Correction Off. All specifications typical.

Frequency Range	Directivity (dB)	Port Match(dB)
1 MHz to 43.5 GHz	> 8 dB	> 8 dB

VNA System Performance for MS46322A-004 and MS46322A-010 (Manual Cal Kits)

Error-Corrected Specifications


With 12-term SOLT Calibration using TOSLN50A-8 or TOSLNF50A-8 N type connector calibration kits.

Frequency Range	Directivity (dB)	Source Match (dB)	Load Match ^a (dB)	Reflection Tracking ^a (dB)	Transmission Tracking ^a (dB)
1 MHz to 6 GHz	≥ 42	≥ 33	≥ 42	±0.15	±0.06
> 6 GHz to 8 GHz	≥ 37	≥ 33	≥ 37	±0.15	±0.06

a. Typical performance.

Measurement Uncertainties

The graphs give measurement uncertainties after the above error-corrected calibration. The errors are a worst-case contribution of residual directivity, load and source match, frequency response and isolation, network analyzer dynamic accuracy, and connector repeatability. 10 Hz IF Bandwidth is used. For transmission uncertainties, it is assumed that $S_{11} = S_{22} = 0$. For reflection uncertainties, it is assumed that $S_{21} = S_{12} = 0$. All calibrations and measurements were performed at default port power. For other conditions, please use our free Exact Uncertainty Calculator software, available for download from the Anritsu web site at www.anritsu.com.

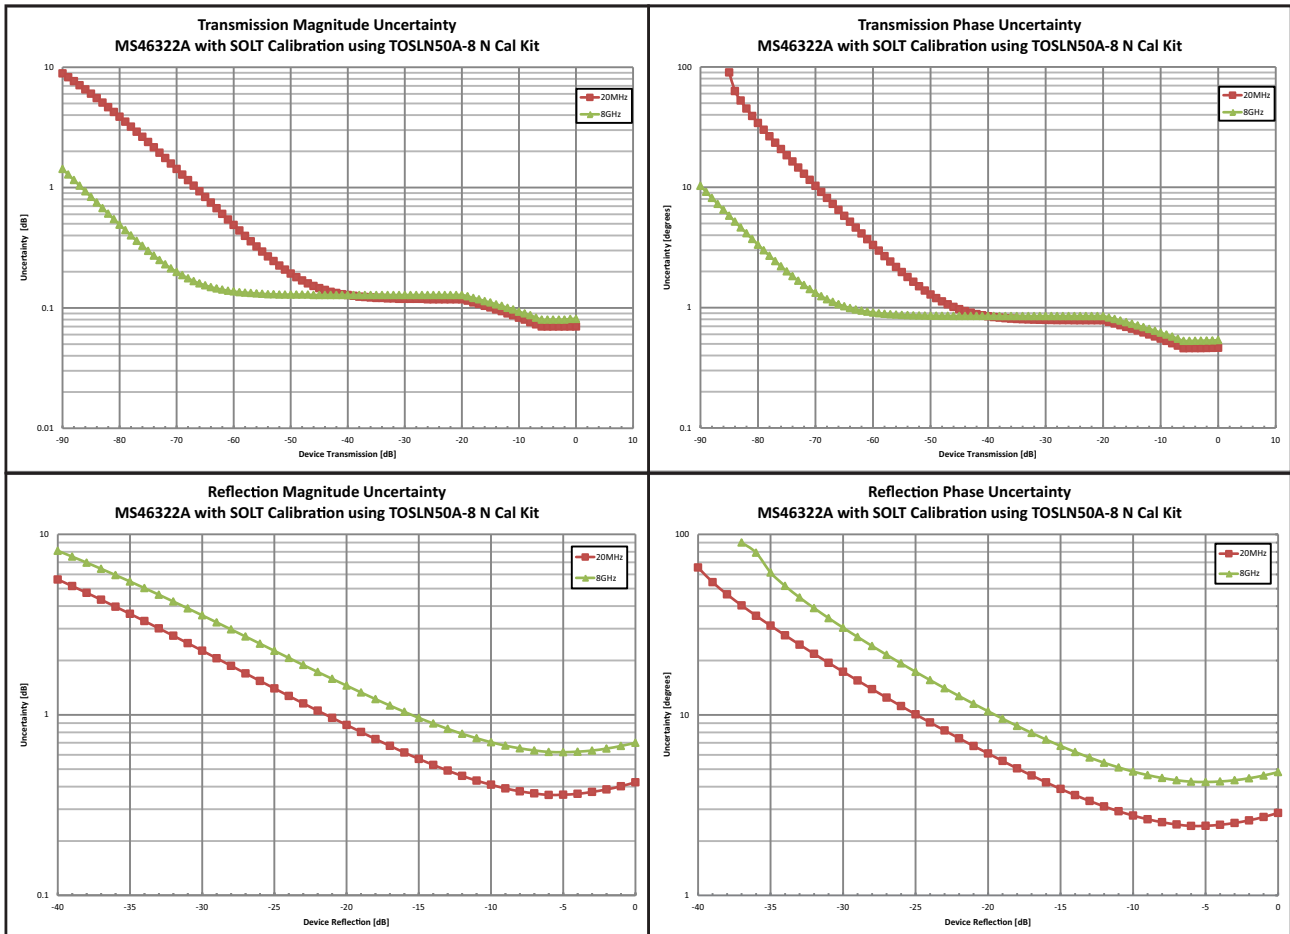

VNA System Performance for MS46322A-014 and MS46322A-020 (Manual Cal Kits)

Error-Corrected Specifications


With 12-term SOLT calibration using the TOSLK50A-20 or TOSLK50A-20 K type connector calibration kits.

Frequency Range	Directivity (dB)	Source Match (dB)	Load Match ^a (dB)	Reflection Tracking ^a (dB)	Transmission Tracking ^a (dB)
1 MHz to 10 GHz	≥ 42	≥ 33	≥ 42	±0.15	±0.06
> 10 GHz to 20 GHz	≥ 36	≥ 26	≥ 36	±0.15	±0.05

a. Typical performance.

Measurement Uncertainties

The graphs give measurement uncertainties after the above error-corrected calibration. The errors are a worst-case contribution of residual directivity, load and source match, frequency response and isolation, network analyzer dynamic accuracy, and connector repeatability. 10 Hz IF Bandwidth is used. For transmission uncertainties, it is assumed that $S_{11} = S_{22} = 0$. For reflection uncertainties, it is assumed that $S_{21} = S_{12} = 0$. All calibrations and measurements were performed at default port power. For other conditions, please use our free Exact Uncertainty Calculator software, available for download from the Anritsu web site at www.anritsu.com.

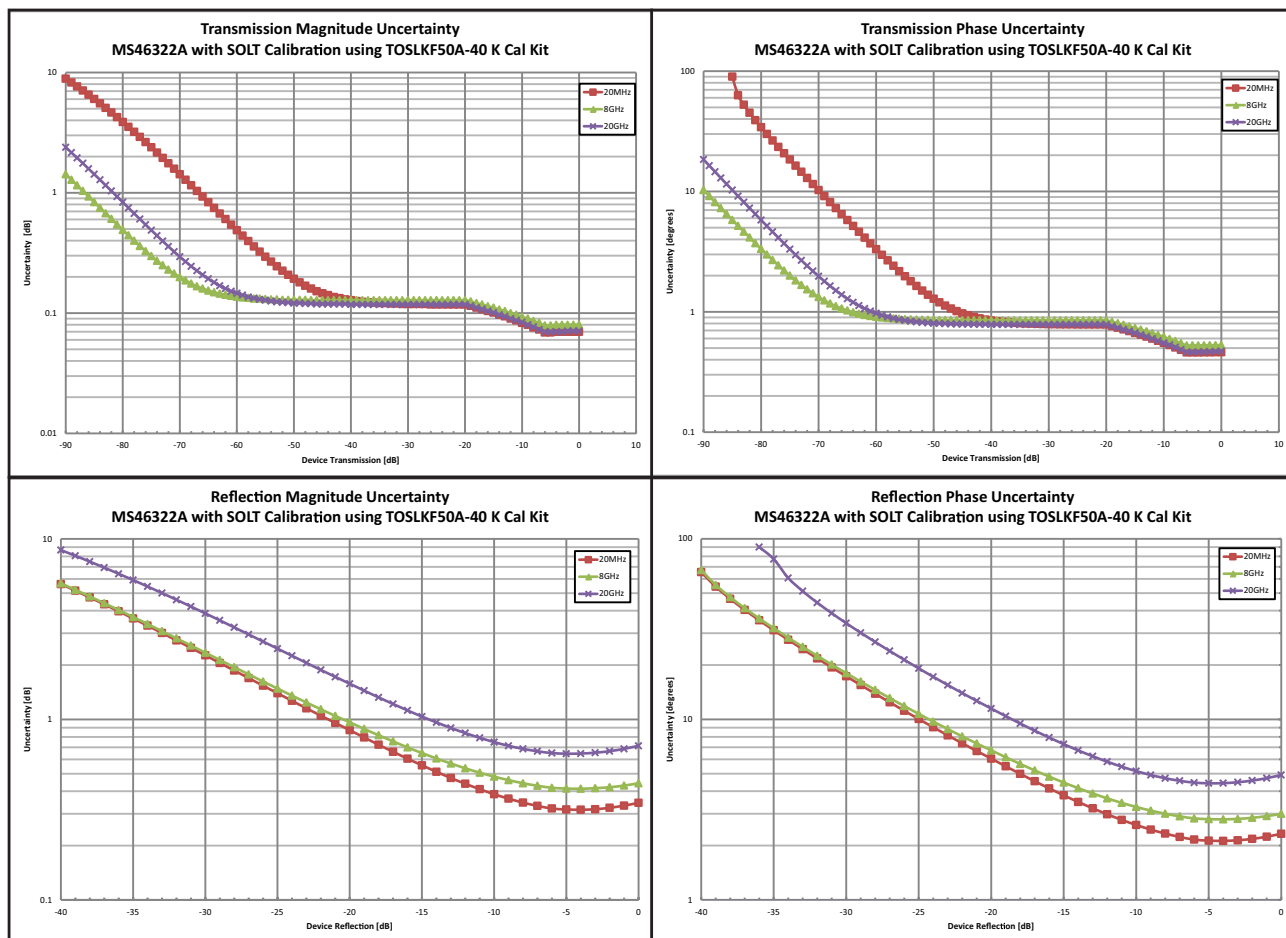

VNA System Performance for MS46322A-030 and MS46322A-040 (Manual Cal Kits)

Error-Corrected Specifications


With 12-term SOLT Calibration using TOSLK50A-40 or TOSLKF50A-40 K type connector calibration kits.

Frequency Range	Directivity (dB)	Source Match (dB)	Load Match ^a (dB)	Reflection Tracking ^a (dB)	Transmission Tracking ^a (dB)
1 MHz to 10 GHz	≥ 42	≥ 33	≥ 42	±0.15	±0.06
> 10 GHz to 20 GHz	≥ 36	≥ 26	≥ 36	±0.15	±0.05
> 20 GHz to 30 GHz	≥ 36	≥ 22	≥ 36	±0.10	±0.05
> 30 GHz to 43.5 GHz	≥ 30	≥ 20	≥ 30	±0.10	±0.05

a. Typical performance.

Measurement Uncertainties

The graphs give measurement uncertainties after the above error-corrected calibration. The errors are a worst-case contribution of residual directivity, load and source match, frequency response and isolation, network analyzer dynamic accuracy, and connector repeatability. 10 Hz IF Bandwidth is used. For transmission uncertainties, it is assumed that $S_{11} = S_{22} = 0$. For reflection uncertainties, it is assumed that $S_{21} = S_{12} = 0$. All calibrations and measurements were performed at default port power. For other conditions, please use our free Exact Uncertainty Calculator software, available for download from the Anritsu web site at www.anritsu.com.

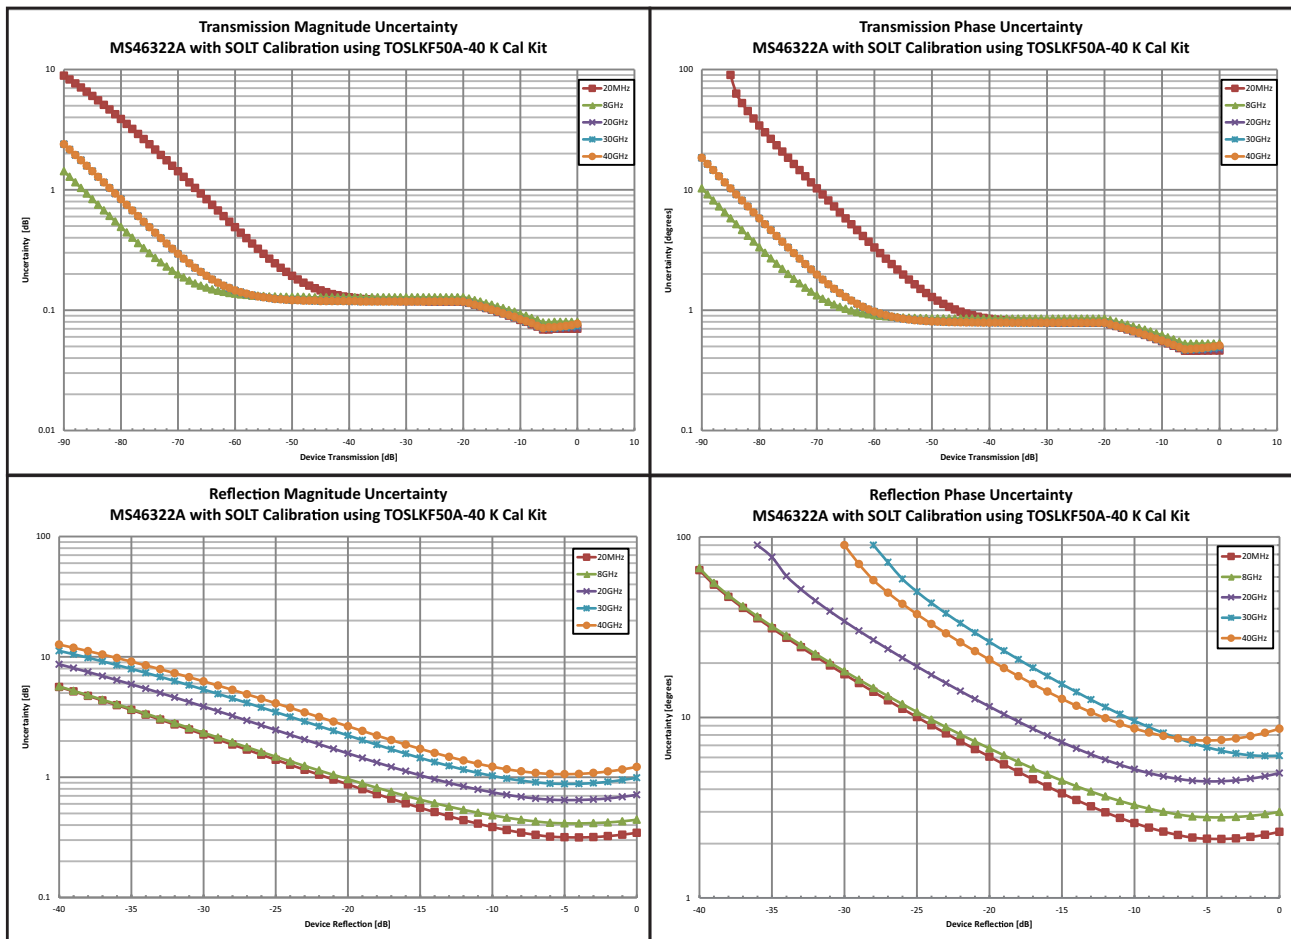

VNA System Performance for MS46322A-004 and MS46322A-010 (SmartCal™)

Error-Corrected Specifications using 8.5 GHz MN25208A SmartCal™


With 12-term calibration using the MN25208A SmartCal™ automatic calibration kit.

Frequency Range	Directivity (dB)	Source Match (dB)	Load Match ^a (dB)	Reflection Tracking ^a (dB)	Transmission Tracking ^a (dB)
1 MHz to < 3 GHz	≥ 42	≥ 33	≥ 42	±0.15	±0.06
3 GHz to 6 GHz	≥ 42	≥ 33	≥ 42	±0.15	±0.08
> 6 GHz to 8 GHz	≥ 37	≥ 33	≥ 37	±0.15	±0.08

a. Typical performance.

Measurement Uncertainties

The graphs give measurement uncertainties after the above error-corrected calibration. The errors are a worst-case contribution of residual directivity, load and source match, frequency response and isolation, network analyzer dynamic accuracy, and connector repeatability. 10 Hz IF Bandwidth is used. For transmission uncertainties, it is assumed that $S_{11} = S_{22} = 0$. For reflection uncertainties, it is assumed that $S_{21} = S_{12} = 0$. All calibrations and measurements were performed at default port power. For other conditions, please use our free Exact Uncertainty Calculator software, available for download from the Anritsu web site at www.anritsu.com.

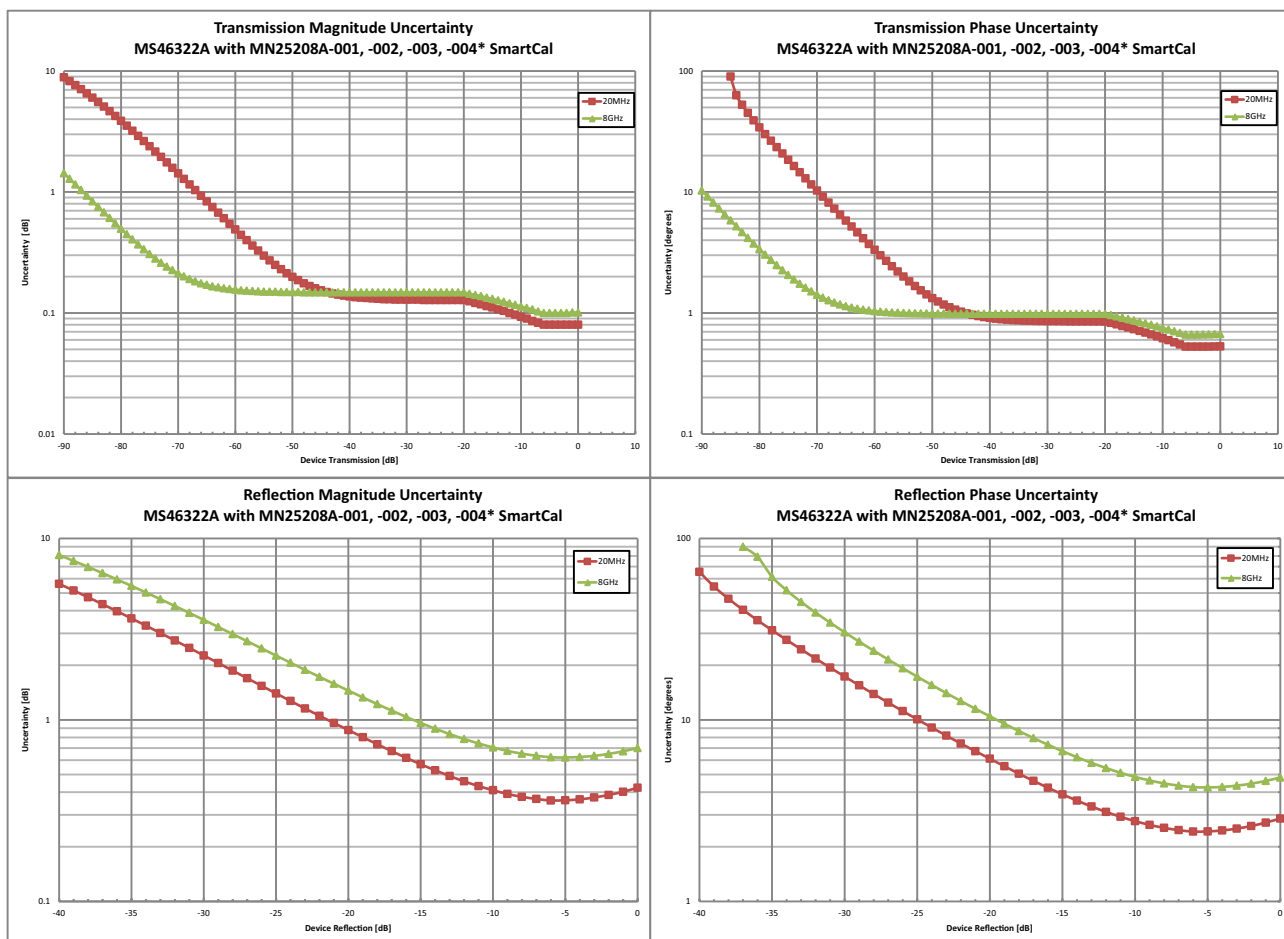

VNA System Performance for MS46322A-040 (AutoCal)


Error-Corrected Specifications using 36585K AutoCal

With 12-term calibration using the 36585K automatic calibrator (AutoCal). Performance is typical.

Frequency Range	Directivity (dB)	Source Match (dB)	Load Match (dB)	Reflection Tracking (dB)	Transmission Tracking (dB)
1 MHz to < 10 GHz	≥ 54	≥ 49	≥ 42	±0.15	±0.06
10 GHz to < 20 GHz	≥ 45	≥ 49	≥ 36	±0.15	±0.05
20 GHz to < 30 GHz	≥ 45	≥ 45	≥ 36	±0.10	±0.05
30 GHz to 40 GHz	≥ 45	≥ 45	≥ 30	±0.10	±0.05

Measurement Uncertainties

The graphs give measurement uncertainties after the above error-corrected calibration. The errors are a worst-case contribution of residual directivity, load and source match, frequency response and isolation, network analyzer dynamic accuracy, and connector repeatability. 10 Hz IF Bandwidth is used. For transmission uncertainties, it is assumed that $S_{11} = S_{22} = 0$. For reflection uncertainties, it is assumed that $S_{21} = S_{12} = 0$. All calibrations and measurements were performed at default port power. For other conditions, please use our free Exact Uncertainty Calculator software, available for download from the Anritsu web site at www.anritsu.com.

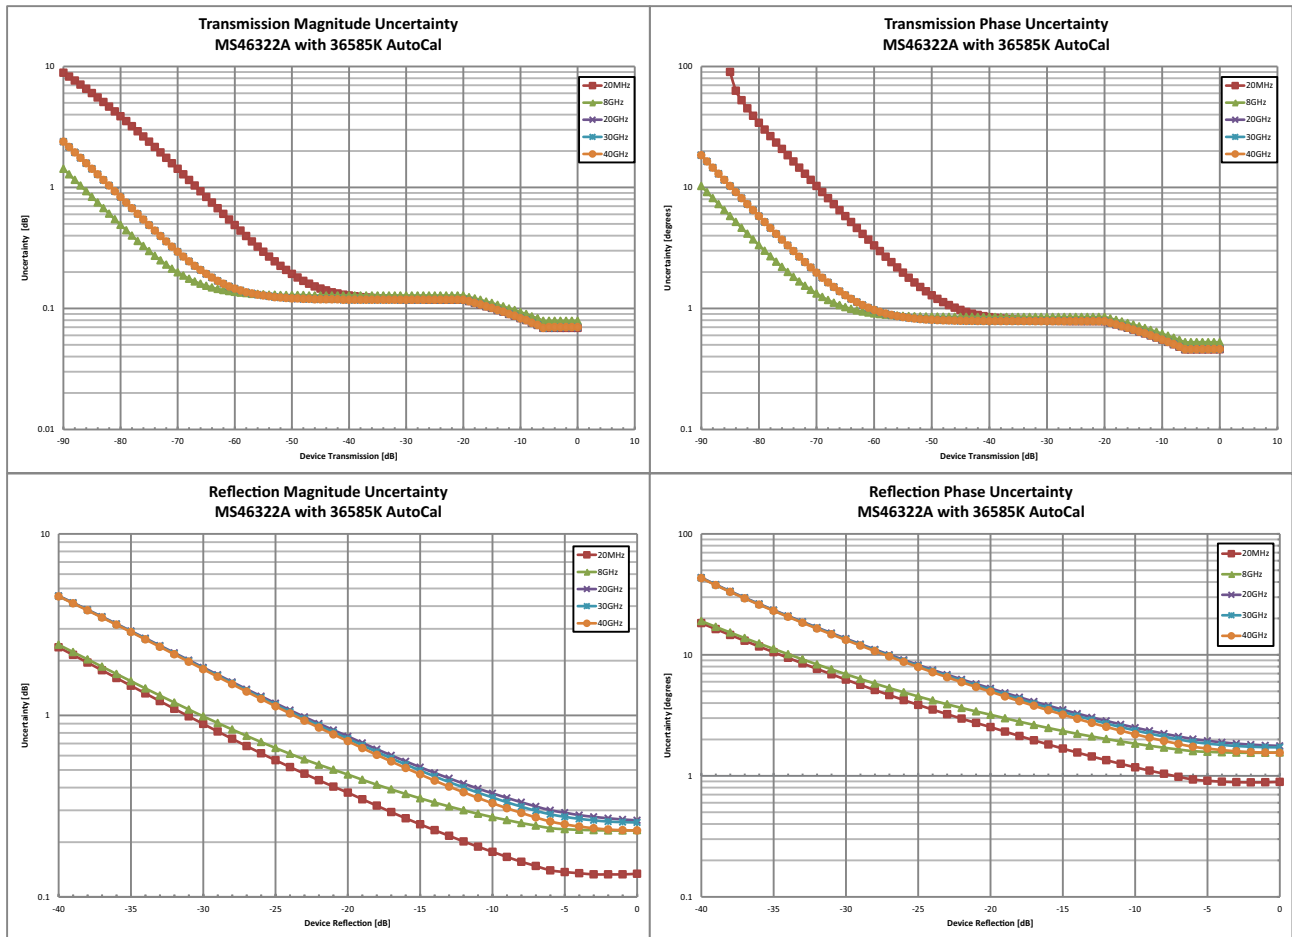

Measurement Throughput Summary

Measurement Speed	220 μ s/point, typical. Per point single sweep time, including placing measurement data into memory. Average of narrow, mid, and wide frequency span sweeps. 300 kHz IFBW, 201 points, 2 port calibrated data measurement.				
Data Transfer Time (ms)	Transferred complex S11 data, using "CALC:DATA:SDATA?" command. Typical performance data. ^a				
	Number of Points	51	201	401	1601
SCPI over LAN					
REAL 64		4	4	4	8
REAL 32		4	4	4	8
ASCII		14	34	60	209

a. Data transfer time varies depending on the PC and control software used with the VNA.

Standard Capabilities

Operating Frequencies	
MS46322A-004	1 MHz to 4 GHz
MS46322A-010	1 MHz to 8 GHz
MS46322A-014	1 MHz to 14 GHz
MS46322A-020	1 MHz to 20 GHz
MS46322A-030	1 MHz to 30 GHz
MS46322A-040	1 MHz to 43.5 GHz
Measurement Parameters	
2-Port Measurements	S_{11} , S_{21} , S_{22} , S_{12} , and any user-defined combination of a_1 , a_2 , b_1 , b_2 , 1 Maximum Efficiency Analysis, Mixed-mode SDD, SDC, SCD, SCC
Domains	Frequency Domain, Time (Distance) Domain (Option 2)
Sweeps	
Frequency Sweep Types	Linear, Log, or Segmented
Display Graphs	
Single Rectilinear Graph Types	Log Magnitude, Phase, Group Delay, Linear Magnitude, Real, Imaginary, SWR, and Impedance
Dual Rectilinear Graph Types	Log Mag and Phase, Linear Mag and Phase, Real and Imaginary
Circular Graph Types	Smith Chart (Impedance), Polar
Measurements Data Points	
Maximum Data Points	2 to 16,001 points
Limit Lines	
Limit Lines	Single or segmented. 2 limit lines per trace. 50 segments per trace.
Single Limit Readouts	Uses interpolation to determine the intersection frequency.
Test Limits	Both single and segmented limits can be used for PASS/FAIL testing.
Averaging	
Point-by-Point	Point-by-point (default), maximum number of averages = 4096
Sweep-by-Sweep	Sweep-by-sweep, maximum number of averages = 4096
IF Bandwidth	
	10, 20, 50, 70, 100, 200, 300, 500, 700 Hz 1, 2, 3, 5, 7, 10, 20, 30, 50, 70, 100, 200, 300 kHz
Reference Plane	
Line Length or Time Delay	The reference planes of a calibration or other normalization can be changed by entering a line length or time delay.
Dielectric Constants	Dielectric constants may be entered for different media so the length entry can be physically meaningful.
Dispersion Modeling	Dispersion modeling is used in the cases of microstrip and waveguide to take into account frequency dependent phase velocities.
Attenuations	Attenuations and constant phase offsets can be entered to better describe any reference plane distortions.
De-embedding	For more complete reference plane manipulation, the full de-embedding system can also be used.
Measurement Frequency Range	
Frequency Range Change	Frequency range of the measurement can be narrowed within the calibration range without recalibration.
CW Mode	CW mode permits single frequency measurements also without recalibration.
Interpolation Not Activated	If interpolation is not activated, the subset frequency range is forced to use calibration frequency points.
Interpolation Activated	If interpolation is activated, any frequency range that is a subset of the calibration frequency range can be used, but there may be some added interpolation error.

Group Delay

Group Delay Aperture	Defined as the frequency span over which the phase change is computed at a given frequency point.
Aperture	The aperture can be changed without recalibration.
Minimum Aperture	The minimum aperture is the frequency range divided by the number of points in calibration and can be increased to 20 % of the frequency range.
Group Delay Range	< 180° of phase change within the aperture

Channels, Display, and Traces

Channels and Traces	16 channels, each with up to 16 traces
Display Colors	Unlimited colors for data traces, memory, text, markers, graticules, and limit lines
Trace Memory and Math	A separate memory for each trace can be used to store measurement data for later display or subtraction, addition, multiplication or division with current measurement data. The trace data can be saved and recalled.
Intra-trace Math	Any two traces within a channel can be combined (via addition, subtraction, multiplication, or division) and displayed on another trace.

Scale Resolution

	Minimum per division, varies with graph type.
Log Magnitude	0.001 dB
Linear Magnitude	10 μU
Phase	0.01°
Group Delay	0.1 ps
Time	0.0001 ps
Distance	0.1 μm
SWR	10 μU
Power	0.01 dB

Markers

Markers	12 markers + 1 reference marker
Marker Coupling	Coupled or decoupled
Marker Data	Data displayed in graph area or in table form
Reference Marker	Additional marker per trace for reference
Marker Statistics	Mean, maximum, minimum, standard deviation Per trace or over a marker region
Marker Search and Tracking	Search and/or track for minimum, maximum, peak, or target value

Other

Filter Parameters	Display bandwidth (user-selectable loss value), corner and center frequencies, loss, Q, and shape factors.
-------------------	--

Calibration and Correction Capabilities

Calibration Methods	Short-Open-Load-Through (SOLT) Offset-Short-Offset-Short-Load-Through (SSLT) Triple-Offset-Short-Through (SSST) SmartCal™ AutoCal Thru Update available
Correction Models	2-Port (Forward, Reverse, or both directions) 1-Port (S_{11} , S_{22} , or both) Transmission Frequency Response (Forward, Reverse, or both directions) Reflection Frequency Response (S_{11} , S_{22} , or both)
Coefficients for Calibration Standards	Use the Anritsu calibration kit USB memory device to load kit coefficients and characterization files. Enter coefficients into user-defined locations. Use complex load models.
Interpolation	Allows interpolation between calibration frequency points.
Adapter Removal Calibration	Characterizes and “removes” an adapter that is used during calibration that will not be used for subsequent device measurements; for accurate measurement of non-insertable devices.
Dispersion Compensation	Selectable as Coaxial, other non-dispersive (e.g., for coplanar waveguide), Waveguide, or Microstrip
Embedding/De-embedding	The MS46322A is equipped with an Embedding/De-embedding system.
De-embedding	De-embedding is generally used for removal of test fixture contributions, modeled networks, and other networks described by S-parameters (s2p files) from measurements.
Embedding	Similarly, the Embedding function can be used to simulate matching circuits for optimizing amplifier designs or simply adding effects of a known structure to a measurement.
Multiple Networks	Multiple networks can be embedded/de-embedded and changing the port and network orientations is handled easily.
Extraction Utility	An extraction utility is part of this package that allows easier computation of de-embedding files based on additional calibration steps and measurements.
Optical/Electrical Conversion	
O/E & E/O	O/E and E/O setup wizard is provided
Impedance Conversion	Allows entry of different reference impedances (complex values) for different ports

Optional Capabilities

Time Domain Measurements, Option 2	Displays all S-parameters and overlays with Frequency Domain, Low-pass Mode with added harmonics frequency list flexibility, Band-pass Mode, Phasor Impulse Mode, Windowing, Gating (pass-band or reject-band), and Frequency with Time Gate.
------------------------------------	---

Remote Operability

ShockLine supports several remote operability options.

Communication Type	Data Format	Performance	Description
Via LAN	Using VXI-11 Protocol	Gigabit Data Transfer Speed	Use SCPI commands
Drivers for LAN	IVI-C drivers are available for download from the Anritsu website. The IVI-C package supports National Instruments LabVIEW and LabWindows, C#, .NET, MATLAB, and Python34 programming environments.		
Triggering	Start Trigger	Software and Digital Edge	
	Input Range	+3.3 V logic level (+5 V tolerant)	
	Minimum Trigger Width	50 ns	
	Trigger Delay	6 μ s, typical	

Front Panel Connections



MS46322A Front Panel

Test Ports 1 and 2

MS46322A-004	N(f)
MS46322A-010	N(f)
MS46322A-014	Ruggedized K(m)
MS46322A-020	Ruggedized K(m)
MS46322A-030	Ruggedized K(m)
MS46322A-040	Ruggedized K(m)
Damage Input Levels	+23 dBm maximum, ±50 VDC maximum

USB Ports

Two type A USB 2.0 Ports for peripherals such as keyboard, mouse, flash drive, hardware key, and similar devices.

Chassis Grounding Port

Banana(f)

Rear Panel Connections



MS46322A Series Rear Panel

AC Power Input

AC Input connector, with On/Off switch, and fuses 350 VA maximum, 90 to 264 VAC, 47 to 63 Hz (power factor controlled)

USB and LAN

USB Ports	Two type A USB 2.0 Ports and two type A USB 3.0 for peripherals such as keyboard, mouse, memory stick, USB monitor, and hardware key.
LAN Port	Gigabit Ethernet

Media

HDMI Port	Video output, touchscreen compatible
Audio	External stereo speaker and microphone (3.5 mm)
HDD	Standard removable hard disc drive

10 MHz In

Signal presence	Signal presence is auto-sensing (better than 10 ppm frequency accuracy is recommended).
Connector Type	BNC(f)
Signal	+0 dBm, typical; 50 Ω, nominal

10 MHz Out

Signal presence	Signal presence is synchronized to and dependent upon the 10 MHz input signal.
Connector Type	BNC(f)
Signal	+8 dBm, typical; 50 Ω, nominal

External Trigger Input

Connector Type	BNC(f)
Voltage Input	0 to 3.3 V input (5 V tolerant)
Impedance	High impedance (> 100 kΩ)
Pulse Width	50 ns minimum input pulse width
Trigger Delay	6 μs typical

CPU, Memory, and Security Features

CPU	Intel Core™ i5
Storage	Serial-ATA (SATA) Solid State Drive (> 30 GB SSD, removable) for OS, Programs, and Data

Security Features

Virus Protection, Best Practices	If the VNA is attached to a network, best practices recommend installing anti-virus software.
Display Blanking	ShockLine™ software can obscure frequency on the system display for security.
Removable Internal Drive	Rear Panel accessible Solid State Drive (SSD) is quickly removable and easy to secure.
2000-1857-R Spare SSD	A bootable SSD module is available as a spare for MS46322A units used in multiple or compartmentalized locations. The operating system and software are pre-installed on each 2000-1857-R SSD.

Mechanical

Dimensions

H x W x D	Dimensions listed are for the instrument body without rack mount option attached. 108 mm x 484 mm x 590 mm
-----------	---

Weight

< 11 kg (< 25 lb), typical weight for a fully-loaded MS46322A VNA

Environmental

Operating

Temperature Range	Specification Conforms to MIL-PRF-28800F (class 3) 0 °C to +50 °C
Relative Humidity	5 % to 95 % at +40 °C, Non-condensing

Non-Operating

Temperature Range	-40 °C to +75 °C
Relative Humidity	0 % to 90 % at +65 °C, Non-condensing

Electromagnetic Compatibility

	EMI Conforms to and meets the requirements of:
EMC Directive	2004/108/EC
Low Voltage Directive	2006/95/EC
Emissions	EN55011:2009+A1:2010 Group 1 Class A
Immunity	EN 61000-4-2:2009, 4 kV CD, 8 kV AD
	EN 61000-4-3:2006+A2:2010, 3 V/m
	EN 61000-4-4:2004, 0.5 kV S-L, 1 kV P-L
	EN 61000-4-5:2006, 0.5 kV S-L, 1 kV L-E
	EN 61000-4-6:2009, 3 V
	EN 61000-4-11:2004, 100% @ 20 ms

Safety

European Union	CE Mark
Standard:	EN 61010-1:2010

Warranty

Instrument and Built-In Options	3 years from the date of shipment (standard warranty)
Calibration Kits	Typically 1 year from the date of shipment
Test Port Cables	Typically 1 year from the date of shipment
Warranty Options	Additional warranty available

Ordering Information

Instrument Models		
	MS46322A	2-Port ShockLine™ Economy VNA (base model)
Requires One Frequency Option		
	MS46322A-004	1 MHz to 4 GHz, type N(f) ports
	MS46322A-010	1 MHz to 8 GHz, type N(f) ports
	MS46322A-014	1 MHz to 14 GHz, type Ruggedized K(m) ports (compatible with 3.5 mm and SMA connectors)
	MS46322A-020	1 MHz to 20 GHz, type Ruggedized K(m) ports (compatible with 3.5 mm and SMA connectors)
	MS46322A-030	1 MHz to 30 GHz, type Ruggedized K(m) ports (compatible with 3.5 mm and SMA connectors)
	MS46322A-040	1 MHz to 43.5 GHz, type Ruggedized K(m) ports (compatible with 3.5 mm and SMA connectors)
Included Accessories		
	User Documentation	Each VNA comes with a set of included accessories. The user documentation USB device includes Adobe Acrobat PDF files for the ShockLine Operation Manual, User Interface Reference Manual, Programming Manual, Calibration and Measurement Guide, and the Technical Data Sheet.
	Power	Power Cord
Main VNA Options		
	MS46322A-001	Rack Mount, adds handles and removes feet for shelf-mounting into a 19 inch universal rack
	MS46322A-002	Time Domain with Time Gating
Calibration Options		
	MS46322A-098	Standard Calibration, ISO 17025 compliant, without data
	MS46322A-099	Premium Calibration, ISO 17025 compliant, with data
Precision Automatic Calibrator Modules		
	MN25208A	2-port USB SmartCal Module, 300 kHz to 8.5 GHz (available with various connector options)
	36585K-2M	K Connector Precision AutoCal Module, 70 kHz to 40 GHz, K(m) to K(m)
	36585K-2F	K Connector Precision AutoCal Module, 70 kHz to 40 GHz, K(f) to K(f)
	36585K-2MF	K Connector Precision AutoCal Module, 70 kHz to 40 GHz, K(m) to K(f)
	2000-1809-R	Serial to USB Adapter (required for use with 36585 AutoCal module)
Mechanical Calibration Kits		
	3650	SMA/3.5 mm Calibration Kit
	3650A	SMA/3.5 mm Calibration Kit, Without Sliding Loads
	3650A-1	SMA/3.5 mm Calibration Kit, With Sliding Loads
	3652A	K Connector Calibration Kit, Without Sliding Loads
	3652A-1	K Connector Calibration Kit, With Sliding Loads
	3653A	N Connector Calibration Kit, Without Sliding Loads
	OSLN50A-8	Precision N Male Open/Short/Load Mechanical Calibration Tee, DC to 8 GHz, 50 Ω
	OSLNF50A-8	Precision N Female Open/Short/Load Mechanical Calibration Tee, DC to 8 GHz, 50 Ω
	TOSLN50A-8	Precision N Male Through/Open/Short/Load Mechanical Calibration Tee, DC to 8 GHz, 50 Ω
	TOSLNF50A-8	Precision N Female Through/Open/Short/Load Mechanical Calibration Tee, DC to 8 GHz, 50 Ω
	OSLN50A-18	Precision N Male Open/Short/Load Mechanical Calibration Tee, DC to 18 GHz, 50 Ω
	OSLNF50A-18	Precision N Female Open/Short/Load Mechanical Calibration Tee, DC to 18 GHz, 50 Ω
	TOSLN50A-18	Precision N Male Through/Open/Short/Load Mechanical Calibration Tee, DC to 18 GHz, 50 Ω
	TOSLNF50A-18	Precision N Female Through/Open/Short/Load Mechanical Calibration Tee, DC to 18 GHz, 50 Ω
	TOSLK50A-20	Precision K Male Through/Open/Short/Load Mechanical Calibration Tee, DC to 20 GHz, 50 Ω
	TOSLKF50A-20	Precision K Female Through/Open/Short/Load Mechanical Calibration Tee, DC to 20 GHz, 50 Ω
	TOSLK50A-40	Precision K Male Through/Open/Short/Load Mechanical Calibration Tee, DC to 40 GHz, 50 Ω
	TOSLKF50A-40	Precision K Female Through/Open/Short/Load Mechanical Calibration Tee, DC to 40 GHz, 50 Ω
Verification Kits (for use with ShockLine VNAs)		
	3663-2	N Connector Verification Kit
	3668-2	K Connector Verification Kit
Removable SSD Kit		
	2000-1857-R	Spare SSD Disk Drive Kit

RF Cables and Adapters

N120-6	RF Cables, Semi-Rigid, N(m) to N(m), 1 each, 0.01 to 18 GHz, 50 Ω, 15 cm (5.9 in)
NS120MF-6	RF Cables, Semi-Rigid, N(f) to N(f), 1 each, 0.01 to 18 GHz, 50 Ω, 15 cm (5.9 in)
1091-26-R	SMA(m) to N(m), DC to 18 GHz, 50 Ω
1091-27-R	SMA(f) to N(m), DC to 18 GHz, 50 Ω
1091-80-R	SMA(m) to N(f), DC to 18 GHz, 50 Ω
1091-81-R	SMA(f) to N(f), DC to 18 GHz, 50 Ω
71693-R	Ruggedized adapter, K(f) to N(f), DC to 18 GHz, 50 Ω
34NN50A	Precision Adapter, N(m) to N(m), DC to 18 GHz, 50 Ω
34NFN50	Precision Adapter, N(f) to N(f), DC to 18 GHz, 50 Ω
34NK50	Precision Adapter, N(m) to K(m), DC to 18 GHz, 50 Ω
34NKF50	Precision Adapter, N(m) to K(f), DC to 18 GHz, 50 Ω
34NFK50	Precision Adapter, N(f) to K(m), DC to 18 GHz, 50 Ω
34NFK50	Precision Adapter, N(f) to K(f), DC to 18 GHz, 50 Ω
K220B	Precision Adapter, DC to 40 GHz, K(m) to K(m), 50 Ω
K222B	Precision Adapter, DC to 40 GHz, K(f) to K(f), 50 Ω
K224B	Precision Adapter, DC to 40 GHz, K(m) to K(f), 50 Ω

Test Port Cables, Flexible, Ruggedized, Phase Stable

14RKFK50-0.6	0.6 m (24"), DC to 40 GHz, Ruggedized K(f) to K(f), 50 Ω
14RKFK50-1.0	1.0 m (39"), DC to 40 GHz, Ruggedized K(f) to K(f), 50 Ω
14RKFK50-0.6	0.6 m (24"), DC to 40 GHz, Ruggedized K(f) to K(m), 50 Ω
14RKFK50-1.0	1.0 m (39"), DC to 40 GHz, Ruggedized K(f) to K(m), 50 Ω
14KFK50-0.6	0.6 m (24"), DC to 40 GHz, K(f) to K(f), 50 Ω
14KFK50-1.0	1.0 m (39"), DC to 40 GHz, K(f) to K(f), 50 Ω
14KFK50-0.6	0.6 m (24"), DC to 40 GHz, K(f) to K(m), 50 Ω
14KFK50-1.0	1.0 m (39"), DC to 40 GHz, K(f) to K(m), 50 Ω
15NNF50-1.0B	1.0 m (39"), DC to 18 GHz, Test Port Cable, Flexible, Phase Stable, N(f) to N(m), 50 Ω
15NNF50-1.5B	1.5 m (59"), DC to 18 GHz, Test Port Cable, Flexible, Phase Stable, N(f) to N(m), 50 Ω
15NN50-1.0B	1.0 m (39"), DC to 18 GHz, Test Port Cable, Flexible, Phase Stable, N(m) to N(m), 50 Ω
15LL50-1.0A	1.0 m (39"), DC to 20 GHz, Test Port Cable, Armored, Phase Stable, 3.5 mm(m) to 3.5 mm(m), 50 Ω
15LLF50-1.0A	1.0 m (39"), DC to 20 GHz, Test Port Cable, Armored, Phase Stable, 3.5 mm(m) to 3.5 mm(f), 50 Ω
15KK50-1.0A	1.0 m (39"), DC to 20 GHz, Test Port Cable, Armored, Phase Stable, K(m) to K(m), 50 Ω
15KKF50-1.0A	1.0 m (39"), DC to 20 GHz, Test Port Cable, Armored, Phase Stable, K(m) to K(f), 50 Ω
SC8267	1.0 m (36"), Cable, 40 GHz, K(m) to K(f), 50 Ω

Phase-Stable 18 GHz and 40 GHz Semi-Rigid Cables (Armored)

3670K50-1	0.3 m (12"), DC to 40 GHz, K(f) to K(m), 50 Ω
3670K50-2	0.6 m (24"), DC to 40 GHz, K(f) to K(m), 50 Ω
3670N50-1	0.3 m (12"), DC to 18 GHz, N(f) to N(m), 50 Ω
3670NN50-1	0.3 m (12"), DC to 18 GHz, N(m) to N(m), 50 Ω
3670N50-2	0.6 m (24"), DC to 18 GHz, N(f) to N(m), 50 Ω
3670NN50-2	0.6 m (24"), DC to 18 GHz, N(m) to N(m), 50 Ω

Transit Case

760-269	ShockLine™ VNA Transit Case, Hard plastic with wheels
---------	---

Tools

01-200	Calibrated Torque End Wrench, GPC-7 and Type N
01-201	Torque End Wrench, 5/16 in, 0.9 N·m (8 lbf·in) (for tightening male devices, for SMA, 3.5 mm, 2.4 mm, K, and V connectors)
01-203	Torque End Wrench, 13/16 in, 0.9 N·m (8 lbf·in) (for tightening ruggedized SMA, 2.4 mm, K and V test port connectors)
01-204	End Wrench, 5/16 in, Universal, Circular, Open-ended (for SMA, 3.5 mm, 2.4 mm, K, and V connectors)
More Information	Refer to our Precision RF & Microwave Components Catalog for descriptions of adapters and other components.

Documentation

User Documentation	Soft copies of the manuals as Adobe Acrobat PDF files are included on the User Documentation USB memory device provided with the instrument. The Maintenance Manual is available from Anritsu Customer Service. For more information, please contact ShockLineVNA.support@Anritsu.com .
10410-00335	MS46322A Series VNA Operation Manual (OM)
10410-00336	MS46322A Series VNA Calibration and Measurement Guide (MG)
10410-00337	MS46121A, MS46122A, and MS46322A Series VNA User Interface Reference Manual (UIRM)
10410-00338	MS46121A, MS46122A, and MS46322A Series VNA Programming Manual (PM)

Training at Anritsu

Anritsu has designed courses to help you stay up to date with technologies important to your job. For available training courses, visit: www.anritsu.com/training



• United States

Anritsu Company

1155 East Collins Blvd, Suite 100
Richardson, TX 75081, U.S.A.
Toll Free: 1-800-267-4878
Phone: +1-972-644-1777
Fax: +1-972-671-1877

• Canada

Anritsu Electronics Ltd.

700 Silver Seven Road, Suite 120
Kanata, Ontario K2V 1C3, Canada
Phone: +1-613-591-2003
Fax: +1-613-591-1006

• Brazil

Anritsu Eletrônica Ltda.

Praça Amadeu Amaral, 27 - 1 Andar
01327-010 Bela Vista, São Paulo, SP, Brazil
Phone: +55-11-3283-2511
Fax: +55-11-3288-6940

• Mexico

Anritsu Company, S.A. de C.V.

Av. Ejército Nacional No. 579 Piso 9, Col. Granada
11520 México, D.F., México
Phone: +52-55-1101-2370
Fax: +52-55-5254-3147

• United Kingdom

Anritsu EMEA Ltd.

200 Capability Green
Luton, Bedfordshire LU1 3LU
United Kingdom
Phone: +44-1582-433280
Fax: +44-1582-731303

• France

Anritsu S.A.

12 Avenue du Québec
Bâtiment Iris 1-Silic 612
91140 Villebon-sur-Yvette, France
Phone: +33-1-60-92-15-50
Fax: +33-1-64-46-10-65

• Germany

Anritsu GmbH

Nemetschek Haus, Konrad-Zuse-Platz 1
81829 München, Germany
Phone: +49-89-442308-0
Fax: +49-89-442308-55

• Italy

Anritsu S.r.l.

Via Elio Vittorini 129
00144 Roma, Italy
Phone: +39-06-509-9711
Fax: +39-06-502-2425

• Sweden

Anritsu AB

Kistagången 20B
164 40 KISTA, Sweden
Phone: +46-8-534-707-00
Fax: +46-8-534-707-30

• Finland

Anritsu AB

Teknobulevardi 3-5
FI-01530 Vantaa, Finland
Phone: +358-20-741-8100
Fax: +358-20-741-8111

• Denmark

Anritsu A/S

Kay Fiskers Plads 9
2300 Copenhagen S, Denmark
Phone: +45-7211-2200
Fax: +45-7211-2210

• Russia

Anritsu EMEA Ltd.

Representation Office in Russia

Tverskaya str. 16/2, bld. 1, 7th floor
Moscow, 125009, Russia
Phone: +7-495-363-1694
Fax: +7-495-935-8962

• Spain

Anritsu EMEA Ltd.

Representation Office in Spain

Edificio Cuzco IV, Po. de la Castellana, 141, Pta. 8
28046, Madrid, Spain
Phone: +34-915-726-761
Fax: +34-915-726-621

• United Arab Emirates

Anritsu EMEA Ltd.

Dubai Liaison Office

902, Aurora Tower,
P O Box: 500311- Dubai Internet City
Dubai, United Arab Emirates
Phone: +971-4-3758479
Fax: +971-4-4249036

• India

Anritsu India Private Limited

2nd & 3rd Floor, #837/1, Binnamangla 1st Stage
Indiranagar, 100ft Road, Bangalore - 560038, India
Phone: +91-80-4058-1300
Fax: +91-80-4058-1301

• Singapore

Anritsu Pte. Ltd.

11 Chang Charn Road, #04-01, Shiro House
Singapore 159640
Phone: +65-6282-2400
Fax: +65-6282-2533

• P.R. China (Shanghai)

Anritsu (China) Co., Ltd.

27th Floor, Tower A
New Caohejing International Business Center
No. 391 Gui Ping Road Shanghai, Xu Hui Di District
Shanghai 200233, P.R. China
Phone: +86-21-6237-0898
Fax: +86-21-6237-0899

• P.R. China (Hong Kong)

Anritsu Company Ltd.

Unit 1006-7, 10/F., Greenfield Tower
Concordia Plaza
No. 1 Science Museum Road, Tsim Sha Tsui East
Kowloon, Hong Kong, P. R. China
Phone: +852-2301-4980
Fax: +852-2301-3545

• Japan

Anritsu Corporation

8-5, Tamura-cho, Atsugi-shi
Kanagawa, 243-0016 Japan
Phone: +81-46-296-1221
Fax: +81-46-296-1238

• Korea

Anritsu Corporation, Ltd.

5FL, 235 Pangyoyeok-ro, Bundang-gu, Seongnam-si
Gyeonggi-do, 13494 Korea
Phone: +82-31-696-7750
Fax: +82-31-696-7751

• Australia

Anritsu Pty. Ltd.

Unit 20, 21-35 Ricketts Road,
Mount Waverley, Victoria 3149, Australia
Phone: +61-3-9558-8177
Fax: +61-3-9558-8255

• Taiwan

Anritsu Company Inc.

7F, No. 316, Sec. 1, Neihu Rd, Taipei 114, Taiwan
Phone: +886-2-8751-1816
Fax: +886-2-8751-1817

List Revision Date: 20160317